



AMERICAN FLOOR PRODUCTS COMPANY, INC.

AFCO-USA

P.O. BOX 7055 • Gaithersburg, Maryland 20898 -7055 • 301-987-0490 • Fax 301-987-0422

email: sales@afco-usa.com • Web Site: www.afco-usa.com

INSTALLATION INSTRUCTIONS

Impact Protection Systems - Flush Mounted Corner Guards

NOTE. All Flush Mounted Corner Guard Systems:

(1) Are available in one style:

TAPE for joint compound and tape finishing.

(2) Are made to "drop-in" when used with two layers of drywall. Second layer of drywall can be trimmed back for the drop-in installation which simplifies installation and saves labor

(3) Are pre-primed so that retainer can be painted at the same time as the adjacent walls

(4) Except Style CG-2130, have aluminum cove base inserts for extra impact protection from equipment and carts

90° and 135° Flush Mounted (Non-Fire Rated)

Section 1

Styles: VENUS® One Piece Partition End Guard (CG-2130) Tape

VENUS® 90° (CG-2160) Tape

VENUS® Rounded (CG-2160A) Tape

VENUS® 135° (CG-2161) Tape

ANDROMEDA® (CG-2167) Tape


Step 1: Measure, square and trim aluminum to "as built" ceiling heights.

Step 2: Debur bottom and insert COVE BASE INSERT (CBI) if required (wedge fit or snap on). May require tapping with composition mallet.


Step 3: Fasten aluminum retainer to metal studs with S.M.S. 18" O.C.

Step 4: With Tape systems, tape and paint

Step 5: Measure, square and trim vinyl corner guard cover. Remove flash and snap onto aluminum retainer.

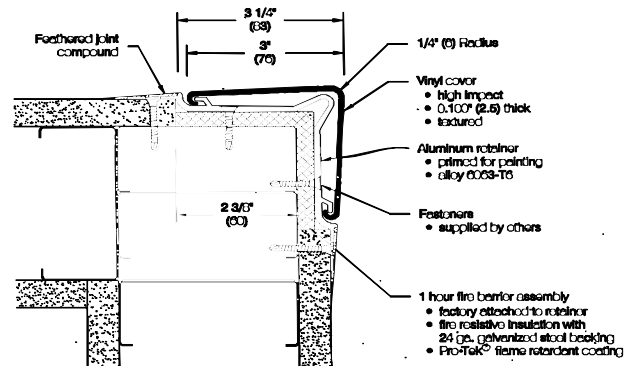

CG-2161 Tape

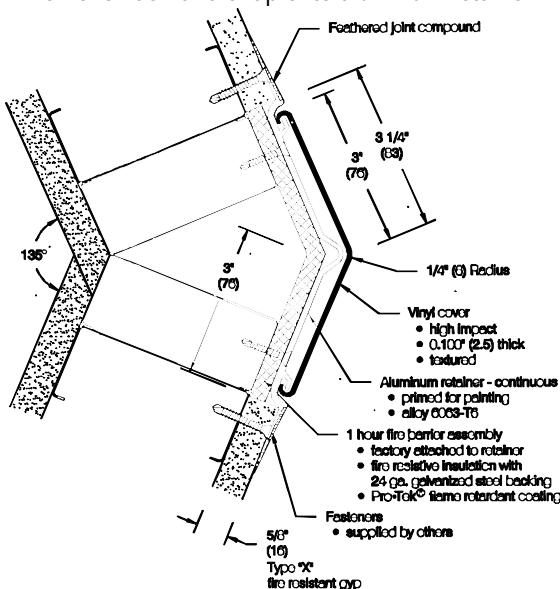

CG-2160 / CG-2167 Tape

Specifications subject to change without notice.